

WISPER

LCD Display for the Wisper SE models



To turn on the bike first make sure the battery is connected and switched on.

Click the On/Off button

To turn off the bike

Press and hold the On/Off button for three seconds

NB It is very important that the battery is turned off using the switch on the side of the battery before installing or uninstalling the battery, failure to do so may cause damage to the connections.

Once the bike has been turned on the LED display will look like the above. The light emblem will only show when the lights are turned on.

Speed Indicator

The large 00.0 shows the speed the bike is traveling.

The bike will be set to miles per hour. To toggle between miles per hour and kilometres per hour press and hold the On/Off button and down arrow at the same time for four seconds.

Light Indicator

The light indicator is seen in the display only when the front lights are turned on.

To turn the lights on click the On/Off button, to turn the lights off again click the On/Off button. The lights run from the main bike battery. The lights will only operate when the bike is turned on.

Battery State Indicator

The battery symbol will show the Voltage left in the battery. When all 5 bars are shown the battery is fully charged. When there are no bars showing the battery is fully depleted and should be charged as soon as possible. The Voltage will drop during use when high loads are being drawn from the battery, this is normal. To gauge the true Voltage let the bike settle to normal load.

Assist Indicator

When the bike is first turned on one bar will show flashing, this means the bike is powered but the assistance is off. The assist indicator has a maximum of 5 bars, every time the up arrow is pressed the bikes power will increase by 20% and another assist bar will become visible. To turn on the assistance, when one bar flashing click the up button, the single bar will stop flashing and the assistance is on.

Trip/ODO Indicator

The trip and ODO indicators can be toggled between by quickly double clicking on the up and down arrows.

The trip indicator will show the distance the bike has been ridden since the last time the trip was reset to zero. To reset the trip indicator quickly double click the power button.

The ODO indicates the amount of distance the bike has been ridden from new and cannot be reset.